

## *VScom Serial Device Servers: NetCom on virtual hardware like VMWare / XEN / VirtualPC*

Neither the NetCom servers nor the drivers care about the hardware of the PC the drivers are installed on. All communication is done via TCP/IP or UDP, and this is independent from the hardware.

Since there is nothing to mention there are no White Papers or HowTos

In fact the screen shots in the User Manual are made on a VMWare system.

*Unique solution ID: #1004*

*Author: Support*

*Last update: 2009-01-05 10:53*