

VScom Serial Device Servers: How to configure the NetCom for my baudrate? This speed is not available in the Device Manager.

The Device Manager is the wrong location to configure your serial port. Your application is responsible to configure the required serial parameters, not the Device Manager. Please check the manual or help of your software.

Information for programmers, the procedure is the same for all types of serial ports in Windows. It is already described here: [How to configure the serial card for my baudrate? It is not available in the Device Manager.](#)

Â

Please check if your NetCom model supports the requested configuration: [I need to use a custom speed on your NetCom, can I do it?](#)

Unique solution ID: #1026

Author: Support

Last update: 2008-12-29 14:16