

*CAN Adapters: All output from the CAN adapter will be written in one line in HyperTerminal?*

You must configure the right settings and switch on "**Append line feeds to incoming line ends**":

*Unique solution ID: #1029*

*Author: Support*

*Last update: 2009-01-05 10:52*