

***CAN Adapters: All output from the CAN adapter will be written in one line in HyperTerminal?***

You must configure the right settings and switch on "***Append line feeds to incoming line ends***":

*Unique solution ID: #1029*

*Author: Support*

*Last update: 2009-01-05 10:52*