

*VScom Serial Device Servers: Through the web browser I have set a password for the NetCom config. Now when I try to access the configuration through a Web Browser it asks me for a username & password - what is the default username?*

The username is empty, just enter the password

*Unique solution ID: #1003*

*Author: Support*

*Last update: 2009-01-05 10:53*